MIDI OUTPUT

BY DEFAULT, THE MICRO SENDS MESSAGES OUT ON
ON MIDI CHANNEL 1.

LED FEEDBACK

TO DRIVE THE LED FOR A SPECIFIC CONTROL, SEND THE OUTPUT MESSAGE FOR THAT CONTROL BACK TO THE MICRO.

LAST BYTE VALUES BELOW CONTROL LED STATE.

BUTTONS - 00 - "OFF" / 01 - ON SOLID / 02 - ON BLINKING

PLEASE NOTE - ONLY THE CONTROLS HIGHLIGHTED IN RED RESPOND TO MIDI FEEDBACK.

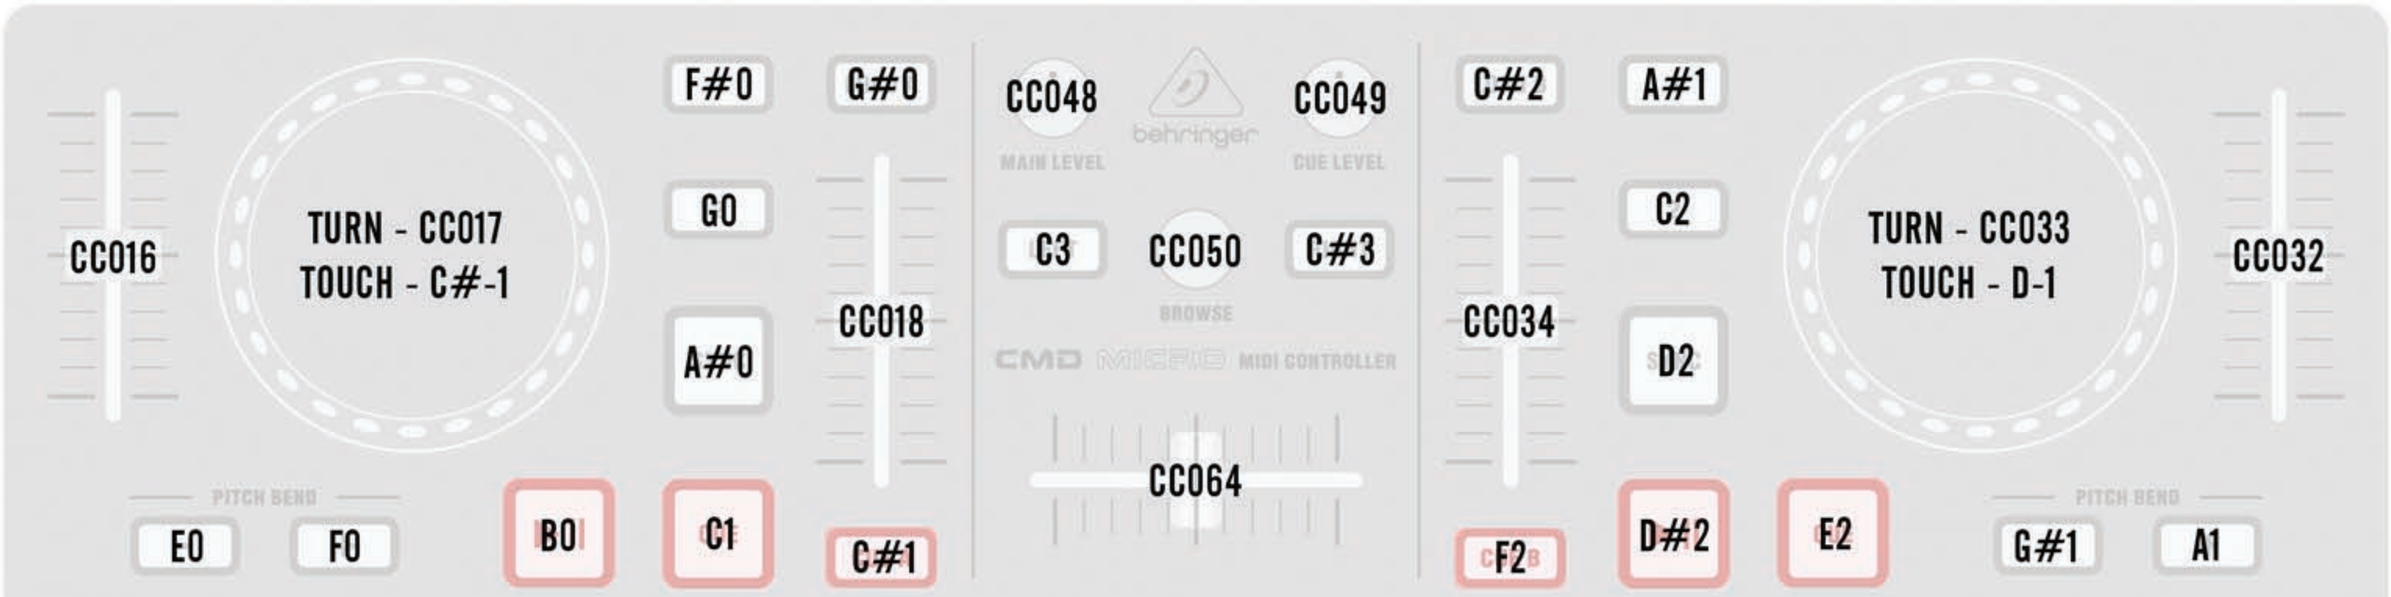

CMD MICRO MIDI MAP